

Carolina Carry All Pattern Corrections

Cutting Edits

Carolina Cities (linings)

- (2) 15 x 8.5 - Inside lining front and back
- (2) 6.5 x 8.5 – Inside lining sides
- (1) 15 x 6.5 - Bottom inside lining
- (1) 9 x 14 – zipper pocket lining

Additional cuts needed to finish pockets:

- (2) 6.5 x 7 – lining for outside side pockets
- (1) 7 x 8 – lining for flag pocket on outside of bag
- (1) 7 x 8 – lining for larger optional inside pocket
- (1) 6.5 x 7 – lining for smaller optional inside pocket

Agriculture:

- (3) 2.5 x WOF – binding
- (2) 1.5 x 32 – handle strips
- (1) 15 x 6.5 - bag bottom

Soft and Stable:


- (2) 15 x 8.5 - front and back bag stabilizer
- (2) 6.5 x 8.5 - sides bag stabilizer
- (1) 15 x 6.5 - bottom bag stabilizer
- (2) 7 x 6.5 - Outside pocket stabilizer

Iron on Interfacing (Shirt Fuse):

- (2) 15 x 8.5 - Interfacing for bag lining front and back
- (2) 6.5 x 8.5 - Interfacing for bag lining sides
- (1) 15 x 6.5 - Interfacing for bag lining bottom
- (1) 7 x 8 – Interfacing for outside pocket
- (1) 9 x 14 – Interfacing for zipper pocket lining

Optional interior pockets:

- (1) 7 x 8 – larger pocket on back side of lining
- (1) 6.5 x 7 – smaller pocket on side of lining

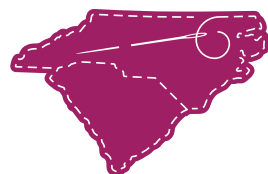

ALL CAROLINAS
SHOP HOP

Construction Edits

Straps:

The 1 ½" strips cut from the panel with the words: "the Carolinas" and the 1 ½" strips of agriculture print are sewn right sides together. Turn right side out and use a bodkin to fill the tube with 1" webbing. Press and topstitch. Set aside.

Binding:

Sew 2 ½" binding strips together with a 45-degree angle, right sides together. Press seams open and trim excess fabric. Fold strip, wrong sides together and press (like you would for quilt binding). Set aside.

Exterior Pockets:

Layer 7 x 6.5" lining, soft and stable and outside pocket pieces. Right sides of lining and pocket fabric should be facing out. Attach an 8-inch section of the prepared binding to the lining side of the pocket, turn the binding to the front side of the pocket. Hand or machine stitch in place (like you would with a quilt). Trim off excess binding fabric. Set aside.

For front pocket, fuse 7 x 8" interfacing to the wrong side of the flag fabric.

Place interfaced flag fabric, right sides together with 7 x 8" lining fabric, sew along the top of the flag fabric. Press seams open, then fold the fabrics wrong side together and press closed. Top stitch just along the top of the flag.

Exterior or Bag:

Attach soft and stable front and back stabilizers to front and back panel sections. Attach soft and stable side bag stabilizers to the wrong side of bag side panels. You can base them or use an adhesive such as 505 spray or free fuse powder.

Using a removable marking pen, draw a line 3" in from both short sides of the front and back panels. Line up the outside of your prepared bag handles. Match raw edges at the bottom, pin handles in place. Measure 1" down from the top of the bag and mark a removable line on the handles.

On backing panel, top stitch the handles in place. Start at the bottom, sew up the line marked 1" down from the top, sew across the line and then back down the other side of the handle. Sew both sides of the handles down.

On the front panel, repeat the process but line the flag pocket under the straps before you stitch them down.

Match up the stabilized side panels with the bound side pockets. Line up the bottoms and baste in place.

Layout the exterior of the bag according to the photo on page 34, sew the side pockets to the short sides of the bottom and the front and back panels to the long sides of the bottom. Match the sides, right sides together and sew from the bottom to the top. You can top stitch around the joining seams to decrease bulk and give extra stability. Turn bag exterior right side out.

Lining:


Fuse interfacing pieces ((2) 15 x 8.5, (2) 6.5 x 8.5, (1) 15 x 6.5) to the coordinating size lining pieces (front and back, sides and bottom). Also fuse 9 x 14" interfacing to the zipper bag lining piece.

Refer to Figure 2 on page 34 for install zipper to interfaced zipper bag lining. Make sure to center the zipper pocket on the lining fabric. Fold the zipper lining right sides together, sew up the side seams.

If you chose to add the 2 additional pockets, interface them like you did the flag pocket. Match up interfaced feature fabric with lining fabric. Sew up one side, along the top and down the other side. Turn, press and top stitch the sides and top seams. Line up the raw edges with the lining pieces and top stitch sides, leaving top seam open.

Layout the lining sections in the same fashion as the outside of the bag, join the seams right sides together to make the lining section just like the exterior.

Place lining section inside of the exterior section. Baste raw edges together. If you are adding the key fob, make sure to line up raw edges on the inside of the bag. Line up raw edges of binding with the lining side of the bag and sew in place. Turn binding the front side of back and hand or machine top stitch.

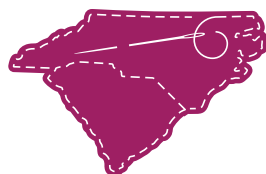

**ALL CAROLINAS
SHOP HOP**